


GENERAL OPEN DIAMOND BIN ASSEMBLY INSTRUCTIONS

BACK
OPEN DIAMOND

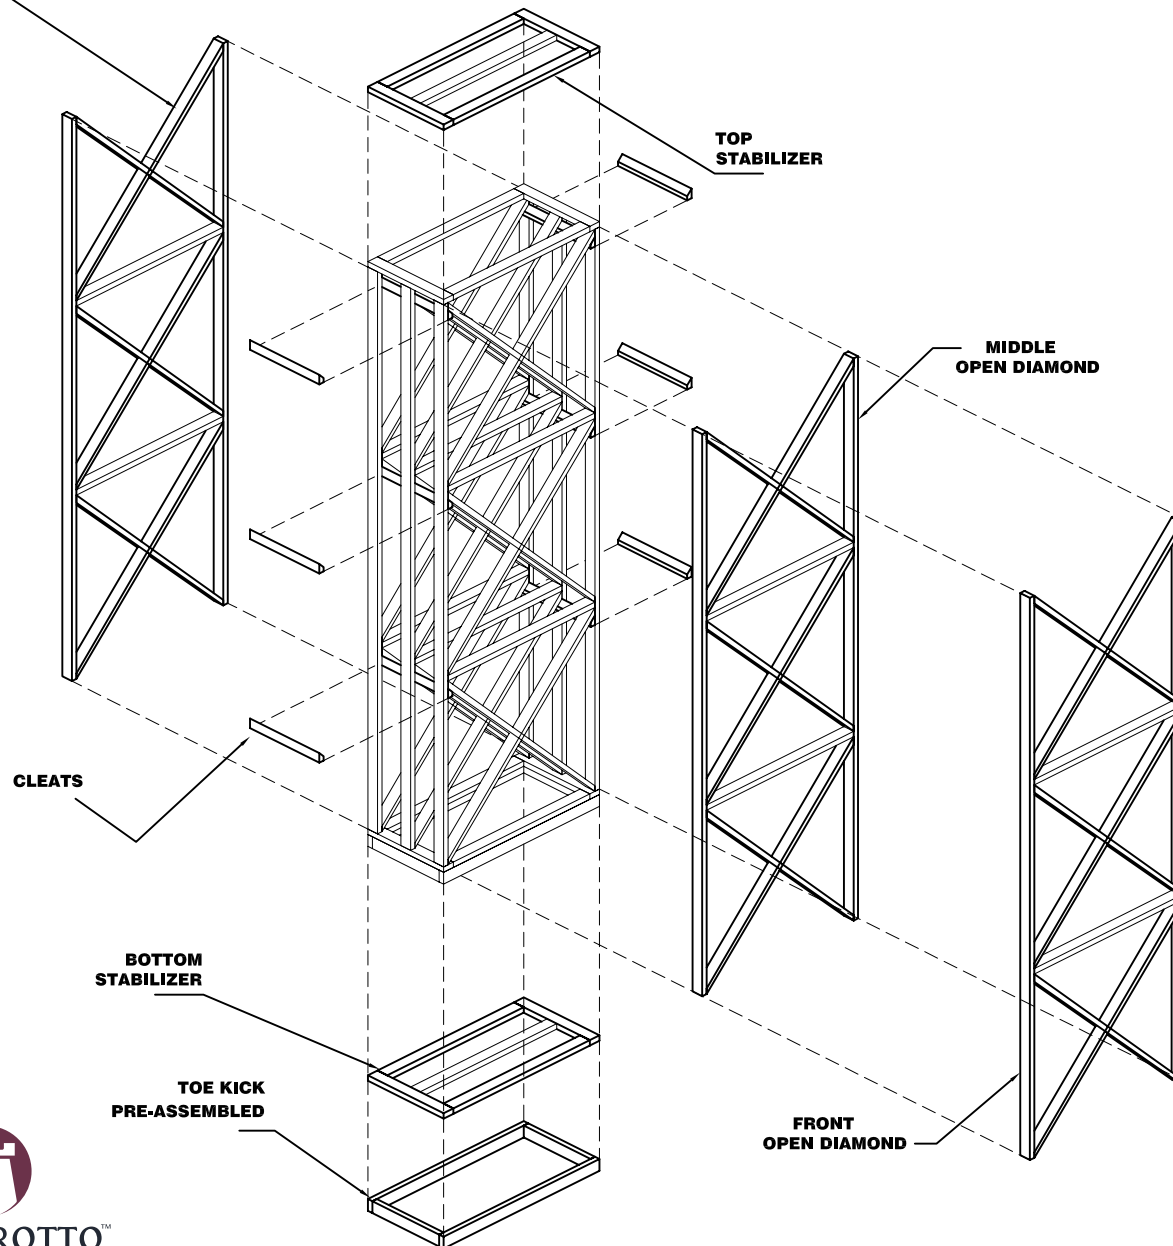

Instructions:

1. Lay down the Back, Middle and Front Open Diamond.
2. Install slotted top & bottom stabilizers on ends of Open Diamond.
3. Install middle Open Diamonds
- 4.- Install Cleats
5. Position onto Toe Kick.
6. Fasten the rack to the wall.

Note:

Use finishing nails to install along with small amounts of wood glue. Drill holes or use a pneumatic nailer.



VINOGROTTO™
WINE RACKS & CELLAR SYSTEMS

Vino Grotto
Premium Wine Cellars

VinoGrotto.com
800.584.0960